

### Quick Start Guide

**A**

Install the MEMS Vision Test Studio software on a Windows-compatible PC from the included USB flash drive. If the setup process does not start automatically, double-click *Setup.exe*.




**B**

Connect one of the MVH4000D Series sensor modules facing up, with or without the extension cable attached, into the sensor module connector ①.

MVH4000D Series sensor module (Based on MoSiC™)



① The sensor module should be kept away from any sources of unwanted heat or humidity, e.g. the vicinity of a laptop or human breathing.

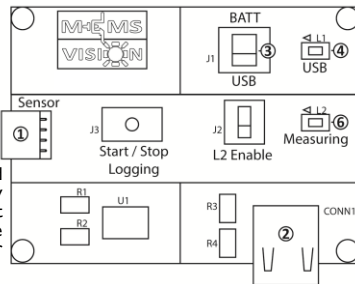

**C**

Connect the USB port ② of the board to the PC using the supplied USB cable, and ensure that the power switch ③ on the board is in the USB position. The USB LED ④ will light up.



**D**

Run the MEMS Vision Test Studio software package from the Start menu and click the Measure button ⑤. The Measuring indicator ⑥ will blink whenever data is being captured.

